## **Analog DEFINITY Extender Quick Installation Guide**

Verify Site	1	а	The customer must furnish the following:		
Requirements			All Switch translations complete for the station(s) being connected.		
<u>A</u>			An analog telephone line		
			for the office module at the switch location.		
proceed until these			An analog telephone line		
net.			for the remote module at the remote site.		
			A second analog line at the switch site		
			for test purposes during install.		
			A two-wire port available (TN-2181 or TN-2224) for connection of the Office module.		
			AC power outlet for the Office module (UPS backup recommended)		
Verify Installation Materials			<ul> <li>DEFINITY digital display telephone (supported sets are: 6408, 6416, 6424, 8410, 8434, Callmaster III, IV, V,VI).</li> </ul>		
			Password for 1 <sup>st</sup> Remote user [add 8 digits to] <b>01</b>		
This procedure			Password for 2nd Remote user [add 8 digits to] 02		
assumes you will set up both the			(You can administer up to 99 users per Office module)		
Switch and Remote modules. If you are		b	Inspect the installation package(s) for missing or damaged material:		
configuring only the Remote module.			Office module		
complete sections 1			AC adapter AC adapter		
then 5 using the			D8W cord phone cord with RJ11 connector		
number and then section 6			phone cord with a RJ11 connector		
		с	To configure the unit on site, you will also need:		
			PC/Notebook with a communications package such as HyperTerminal		
			Straight cable-9-pin male connector on one end and a female on the other		



Set Up PC Connection for administration	3	You will need to use a communications package — for example, HyperTerminal — to configure and test the Analog DEFINITY Extender. The steps below describe a first time setup for HyperTerminal.				
		a /	Access: Start button > Programs > Accessories > HyperTerminal folder > HyperTerminal folder >			
		b <sup>-</sup>	Type <b>1100</b> for the new modem connection and click <b>OK</b> .			
		с /	At the Phone Number dialog, select Connect using = <b>Direct to COM1</b> (ignore other settings) and click <b>OK</b> .			
		d /	At the COM1 Properties dialog, set the parameters to <b>9600</b> , <b>8</b> , <b>none</b> , <b>1</b> and <b>hardware flow control</b> and click <b>OK</b> .			
		e	When the HyperTerminal window appears, it will be blank — that is, there is no logon prompt.			
		f (	Click on <b>File,</b> then <b>Properties.</b> Select <b>Settings</b> tab and go to <b>Emulation</b> window. Select <b>VT100</b> and then click <b>OK.</b>			
Power Up		g f I	Plug the Office module power cord into the wall outlet. Watch the LED light on the top of the Office module. When you see 3 sets of 8 yellow flashes type <b>MENU.</b>			
Administer the Office	4	The Office module will be administered using your PC. You will need to refer to the information obtained in section 1.				
module		a	Select "Configure System" from the Main Menu. Select "Password" from the "Configure System Menu" and press <b>Enter.</b>			
		b	Enter the Administrator Password (the default is 00000000) and press Enter			
		с	Highlight "Change Password" and press Enter.			
		d	Type new password as shown on page 1 and press Enter.			
		е	If there are additional remote users for this switch module, repeat steps ${\bf C}$ and ${\bf D}$ to create a password for each remote user.			
		f	Highlight "Exit" and press <b>Enter</b> to exit from the password sub-menu. Highlight "Exit" again and press <b>Enter</b> to exit from the Main Menu.			

Administer the Remote Module	5	You will administer the Remote module using the display on the telephone.			
for testing at the Switch site.		a	Plug the Remote module power cord into the wall outlet. (You will need a second electrical outlet for this purpose.)		
		b	The following display appears on the telephone:		
			2: OK 3: Next		
			Go Online?		
			Press <b>3</b> on the touch-tone pad for <b>Next</b> . Then select <b>Set Dial Numbers</b> by entering <b>2</b> .		
		с	Press <b>2</b> to select <b>Set Office Phone Number.</b> Enter the phone number of the Office Module telephone line. Press <b>DROP</b> or <b>REDIAL</b> to accept the number.		
		d	Press <b>3</b> to select <b>Set Remote Phone Number.</b> Press <b>2</b> and enter the phone number of the switch site test line. Press <b>DROP</b> or <b>REDIAL</b> to accept the number. Press <b>1</b> until you are at the <b>Go Online?</b> menu.		
Acceptance	6	To test connectivity, press <b>2</b> from the <b>Go Online?</b> Menu.			
Testing		At this point, the Remote Module dials the Office module.			
looting			The Enter Password screen appears.		
		,	Enter the password. Press the <b>DROP or REDIAL</b> button on the telephone connected to the Remote Module.		
		b	If a valid password has been entered, the Remote Module completes the connect sequence and the telephone is operational.		
		с	If you are unable to connect, do the following:		
			verify the password you entered		
			verify all connectivity		
			verify an programming-both the Onice and Remote modules		

	From the GO ONLINE? Press 3. Press 2 to select Set Dial Numbers? Press 3 for Next.		
module for use at the remote sitebPress 2 to select Set Remote Phone N number of the remote site telephone lin number.	<b>lumber?</b> Press <b>2</b> and enter the phone e. Press <b>DROP</b> or <b>REDIAL</b> to accept the		
c Press 1 until Go Online? appears.			
Wrap Up Site Visit8aExit HyperTerminal by closing its window disconnect now.	w and confirming ( <b>Yes</b> ) that you want to		
Select <b>Yes</b> when prompted to save the "1100" on the HyperTerminal folder (yo analog Definity Extenders).	session — this will result in a new icon u can use it for future connections to		
<b>b</b> Disconnect your PC from the Office mc	dule.		
c Repackage the Remote module. The c the Remote site.	sustomer will be responsible for delivery to		

Make certain to leave these instructions with the customer contact at the Switch site.